

## Troubleshooting for Gargle Dispenser

Symptoms	Corrective actions
The leak of liquid from the nozzle	Check whether the kit lever is located at right place. Push the lever strongly to the correct location so that the leak stops.
The liquid does not come out as a quantitative 12ml.	Push the kit lever to the end to get the gargle liquid. (If not, the gargle continues to flow out.)
The bottle of mouthwash liquid does not fit easily or you can not get it fully inserted.	<p>Check if the inner cover of the previous bottle is still remained in the central inlet.</p> <p>It happens to be when you change the bottle.</p> <p>In that case, remove it then you can get the new bottle fully inserted.</p>
Only little volume or no liquid comes out.	The kit nozzle may be clogged due to long term non-use. Clean the inside of nozzle (discharge outlet of gargle liquid) with the thin and long thing (for example, a toothpick).
How to change kits	See the figures.



### Caution

If you want to change the gargle container, drain all gargle liquid from the container before changing it with new one.

Clean mouth!  
Fresh Breath!



Gargle Dispenser

## Gargle Dispenser

New concept mouth cleaner

User' manual



# 01 Gargle Dispenser User's Guide

## How to install

- 1 Select a place to fix the wall-plate(bracket). Make sure the place should be clean and dry. (The wall-bracket is inserted in the rear of the body.)
- 2 Detach the protective tape from the double-side adhesive tapes enclosed.
- 3 Use the adhesive tapes and attach the bracket on the wall in the direction of the English letters "Made in Korea" shown below and then press it for fixing. You can make it more tightened on wall with proper sized screw bolts or you may use adhesive silicone for complete attachment.
- 4 After the lapse of two hours, insert the body well into the bracket and finally fasten it to the bracket using a bolt enclosed.
- 5 Push the button on top of the dispenser and open the door forward. Our mouthwash liquid bottle has both inner cover and outer cap. Open the outer cap (never open the inner cover) and erect the bottle upside down and push the bottle neck to fit into the central inlet inside the dispenser.



### Accessories

- (1) Automatic cup dispenser (the lower part)
- (2) Cup holder (the middle part)
- (3) Cup holder (the upper part)
- (4) Key
- (5) Fixing bolt (for fastening main body and wall-bracket)



Dispenser main body

# 02 How to assemble

## Assembly of the automatic cup dispenser and cup holders.

Put 01 + 02 + 03 as shown figures and assemble a set by putting pressure after inserting grooves. The set has to be fit into the right side of main body.



Location of fastening bolt




Finished dispenser unit




Installed mouthwash bottle

# 03 How to change the kit

- 01 Loosen the fixing bolt to separate the main body from wall-bracket.

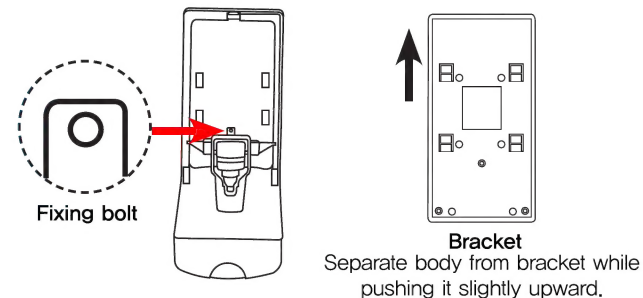

- 02 Loosen the two bolts on the back of main body to separate the kit.

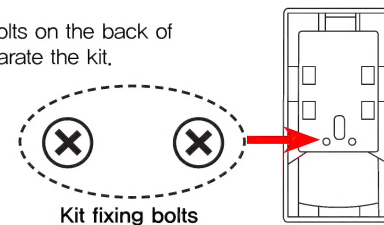

- 03 Exchange a new kit in the device.

